

Remove glove box,

refer to 51 16 360

If necessary, remove passenger airbag,

refer to 32 34 504

Remove plate for heating controls,

refer to 64 11 750

Remove hazard warning light switch,


refer to 61 31 080

Unfasten and lower steering column,

refer to 32 31 090


Remove instrument cluster,

refer to 62 21 000

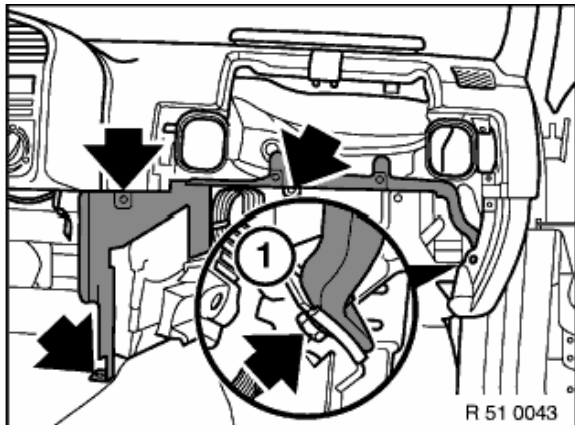


Only with passenger airbag:


Unfasten screws and remove rod (1).

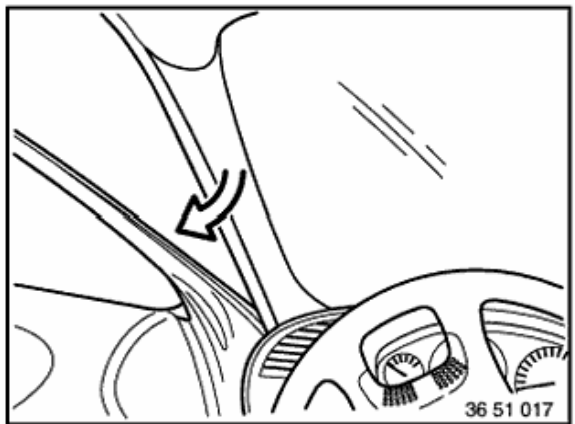


Unclip left and right A-pillar trim panels.

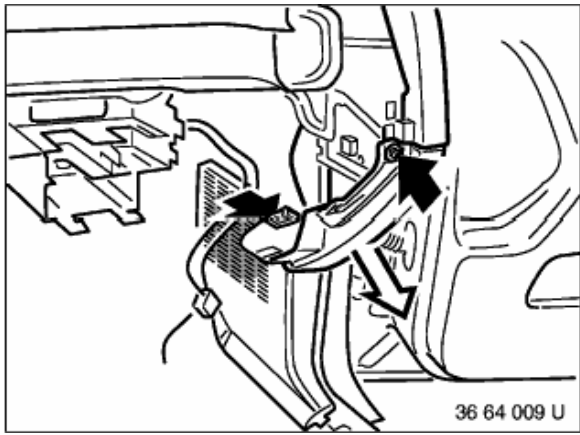


Remove screws and right dashboard trim panel.

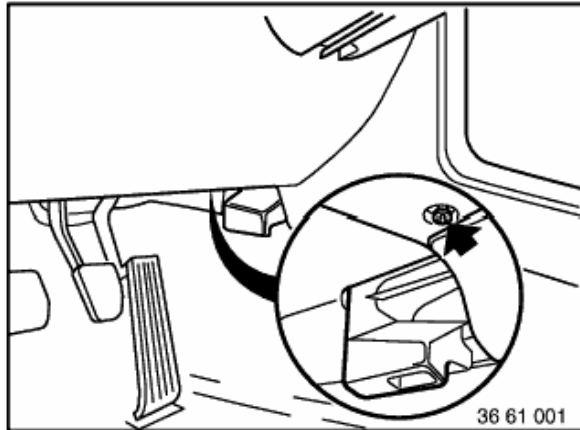

Remove bottom trim panel screws at left side.

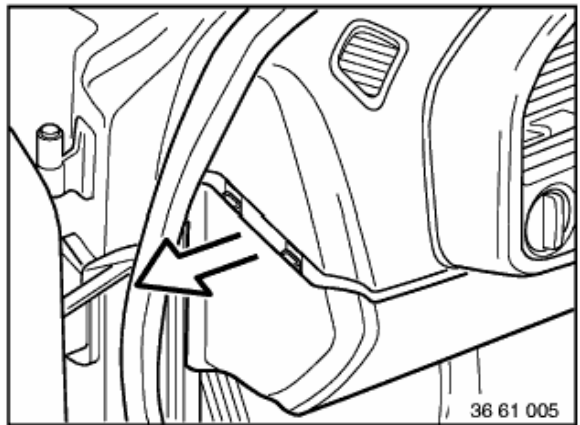

Pull bottom trim panel to the side out of the clips.

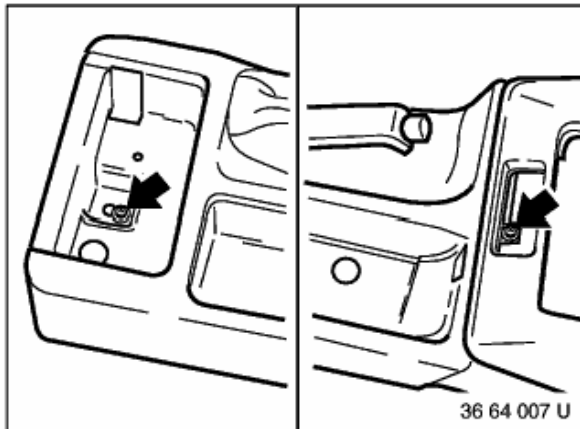

Removing shift lever cover,


refer to 25 11 000

or


25 16 050

Remove rear ashtray.

Unscrew screws and remove parking brake lever.

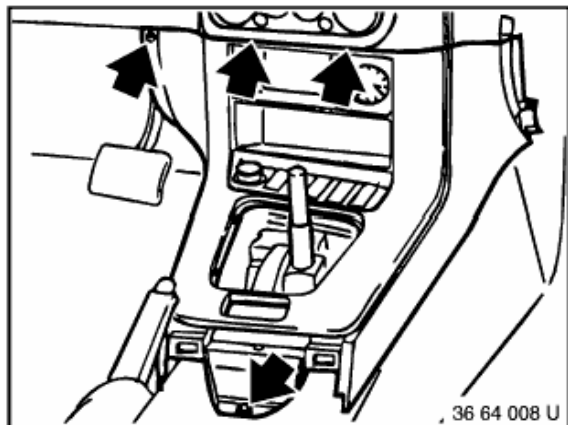

Remove screws and remove centre console.

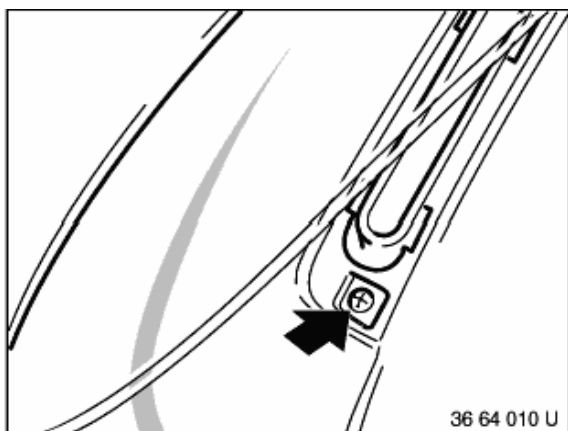


Unclip frames for left and right defroster nozzles.


Remove outer screws on left and right.

Note:

Remove screw with a bit-switchover ratchet (short version).

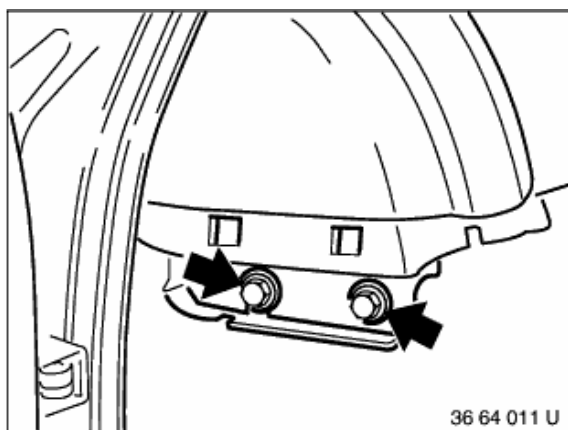

Remove left and right screws and remove dashboard.

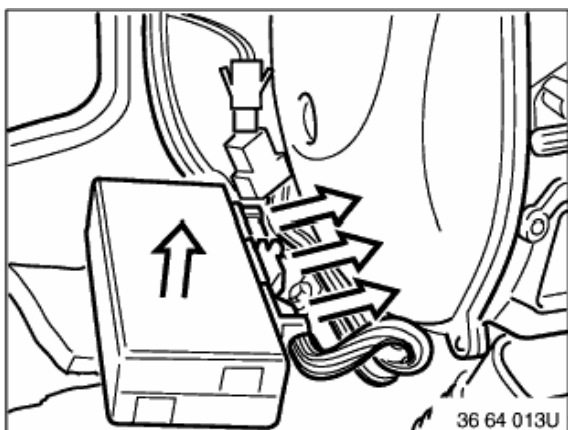

If car has air conditioner:

Lift control unit out and disconnect plug.